
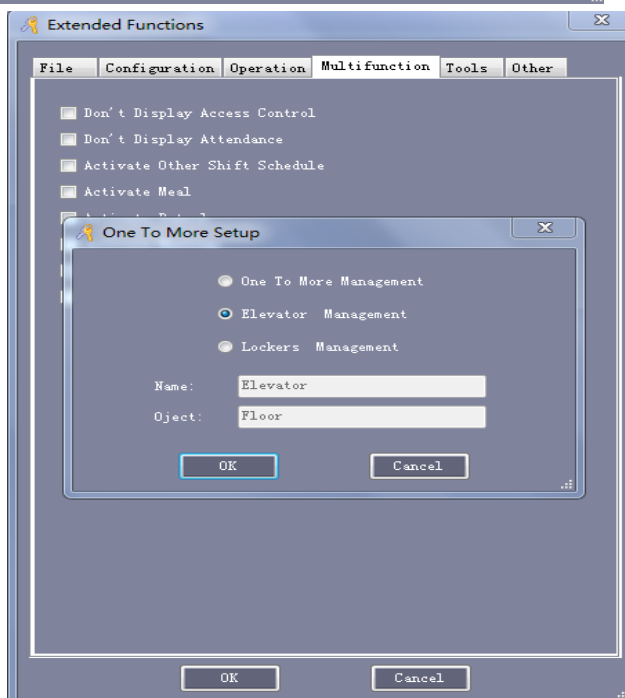


Elevator control Operations

Add elevator control functions ,

1 Click button “Tool “ and select and enter “Extended functions “(by password 5678)

2,click button “Multifunction “ and select “Activate OnetoMore” and select “Elevator management “ in super as bellow,

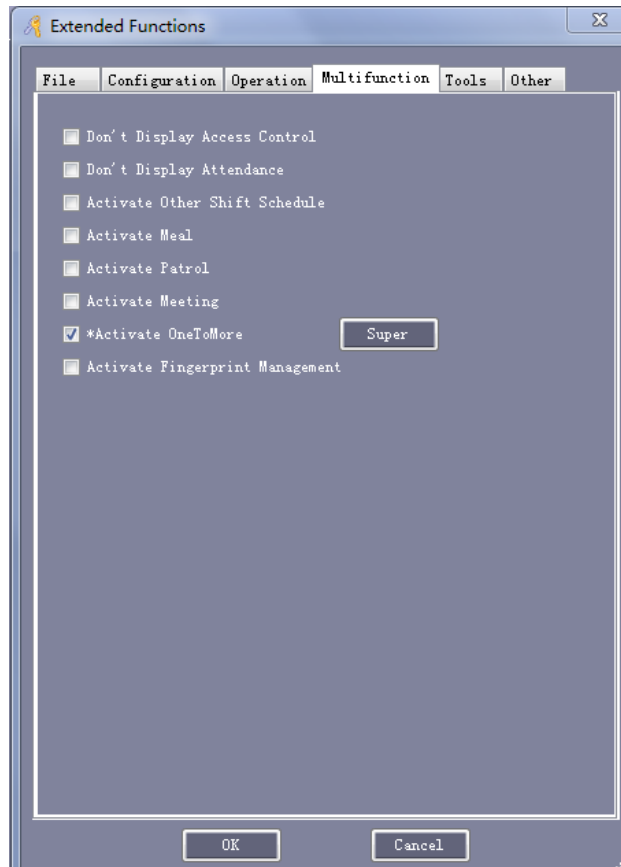

]

Click button “OK “ to confirm and exit.

Then exit software and re-login the software.

click button “ Elevator “ in left lower enter into elecator set.

The screenshot shows the 'Elevator Management' application window. The title bar reads 'Elevator Management'. The menu bar includes 'Floor Configure', 'Privilege', 'Print', 'Export To Excel', 'Upload', 'Find', and 'Close'. Below the menu bar, there are input fields for 'Name', 'CardNO', and 'Dept.', followed by 'Query' and 'Clear' buttons. The main area of the window is a table with the following headers: 'User ID', 'User Name', 'Card NO', 'Department', 'Privilege', and 'Time Profile'. The table body is currently empty.

Click “Privilage “ into bellow set,

The screenshot shows the 'Floor Configure' application window. The title bar reads 'Floor Configure'. The interface includes input fields for '*Floor Name:' (containing 'F'), 'Elevator', and 'Floor-Relay No.'. Below these fields are four buttons: 'Change Name', 'Add', 'Delete', and 'Close'. At the bottom, there is a table with the following headers: 'Floor Fullname', 'Elevator', and 'Floor-Relay No.'. The table body is currently empty.

Then select users to authorize them named floors .When all set OK .click buttton “ Upload “
Then all sets are updated to elevator controllers .